Pixel Stars™

#PIXELSTARS

6+

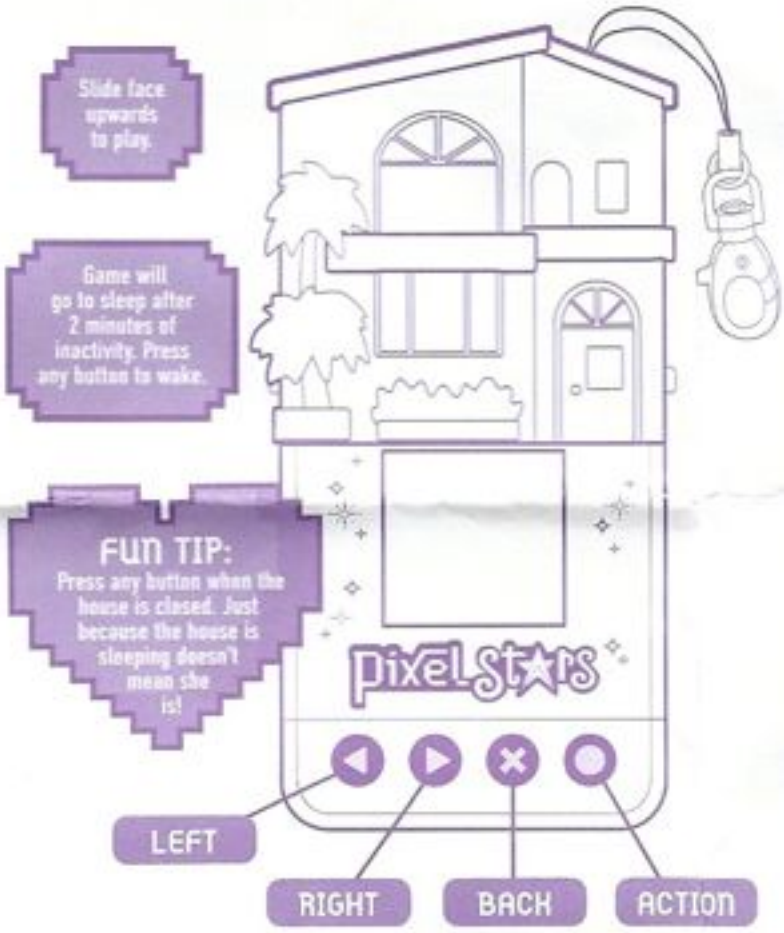

REMOVE COVER & REPLACE BATTERIES

2x AAA (LR03) 1.5V

(not included)

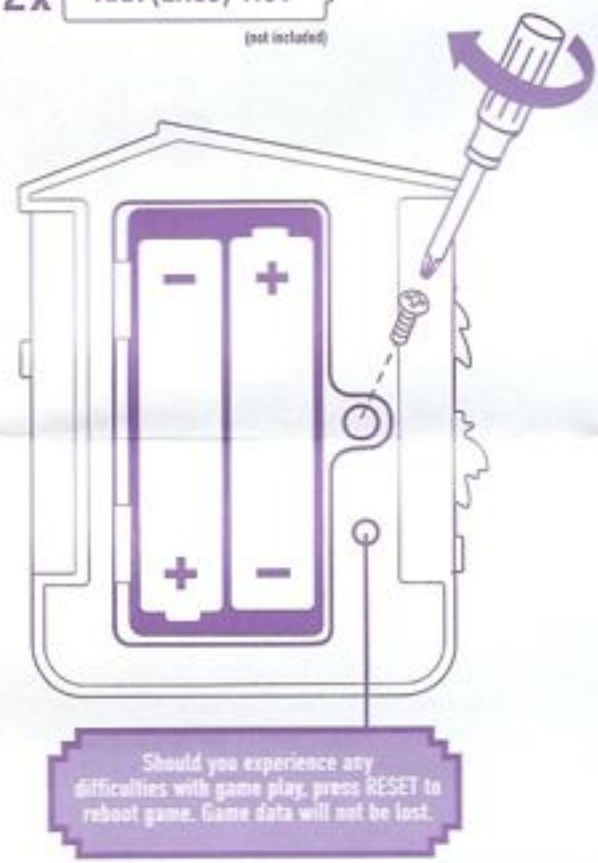

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions.

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna - Increase the separation between the equipment and receiver - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected - Consult the dealer or an experienced radio/TV technician for help.

WARNING: This toy produces flash that may trigger epilepsy in sensitized individuals.

ALKALINE BATTERY CAUTIONS

- Do not use rechargeable batteries.
- Different types of batteries or new & old batteries are not to be mixed.
- Batteries are to be inserted using correct polarity.
- Remove exhausted batteries as soon as possible & discard properly.
- Remove all batteries from compartment if toy is not used for a long period.
- Never throw batteries in a fire or attempt to open the outer casing.

CE

⚠ WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

CONTROL BUTTONS

Press LEFT or RIGHT to scroll through options. One option will appear on screen at a time, indicated by a bouncing cursor. If you're uncertain what to do, press LEFT or RIGHT to reveal other options.

Press ACTION to proceed with the highlighted option or take action.

Press BACK to reverse actions, exit, or zoom out.

GETTING STARTED

Press LEFT or RIGHT to select either the Celebrity Chef, Social Media Star, or Fashion Designer, then press ACTION to choose. Customize her style by choosing hair then skin color. Your chosen girl will then "move in" and the game begins!

SWITCHING GIRLS

To switch girls, press the ACTION button when the bouncing cursor is above the girl currently in play. You will be returned to the home screen where you may choose another.

CHECKING GIRLS' STATUS

Ensure all girls are healthy and happy. When the bouncing cursor is above her head, press ACTION to return to the home screen. Select any girl, then press ACTION again. If meters are low, engage in activities that will boost how she feels. If you buy a pet (see Shopping), you can check on the pet's status too!

So much to do! A busy girl is a happy girl.

Don't forget to eat & drink along the way!

Do your best in all things and score big!

Keep yourself healthy and clean!

Sleep and exercise regularly.

Earn $ (Coins) when you cook or post videos (see Mini Games)

INTERACTING WITH OBJECTS

When the bouncing cursor is above her head, press LEFT or RIGHT to scroll through options for what to do next. To interact with an object, press ACTION and a bubble will appear with additional options. Press LEFT or RIGHT to make additional selections, then press ACTION to interact.

MOVING ROOM TO ROOM

Press LEFT or RIGHT until the bouncing cursor appears pointing to the left or right. Press ACTION and your girl will walk into the next room.

FUN TIP: Shaking the girls' house may result in an unexpected reaction!

ZOOM VIEW

Press BACK for a zoomed-out view of 4 rooms at once. From this view, select any room on the screen, then press ACTION to walk to that room. If you have more than 4 rooms in your house, select the bouncing arrow cursor to see additional rooms.

1000+ Things to do & Collect

SHOPPING WITH THE LAPTOP

Use the living room laptop in game to buy everything, including clothes and items to decorate with. Buying Room Additions include selections to customize wall and floor coverings. When buying Home Decor or Pets, you will need to select a location within your house to place them.

DELIVERIES & RETURNS

Certain items may be delivered to your door. Most items you buy can also be sold back to the store for a partial Coin refund. Simply select the item, wherever you have placed it in your house, then select the Coin option to sell it back.

CELEBRITY CHEF MINI GAMES

Select the Celebrity Chef and play cooking mini games only she can play. Select her island countertop to start. You'll receive scores and earn Coins for each completed mini game. Note that ingredients used during games will need to be replenished. You can buy replacement cooking supplies through the laptop's Online Store (only available in store when playing as Celebrity Chef).

Replenish in store

SOCIAL MEDIA STAR MINI GAMES

Create videos for the Social Media Star's loyal online followers! Earn Coins by editing video clips together in a mini game that only she can play. Go to the living room and select her camera equipment to start. If you run low on video clips, you will need to buy more through the laptop's Online Store (only available in store when playing as Social Media Star).

Replenish in store

FASHION DESIGNER MINI GAMES

Sewing outfits is a mini game only the Fashion Designer can play. Creating stylish designs is how she earns Coins. Select her sewing machine in the living room to start. Note that sewing materials will need to be replenished so you can create more designs. You can buy sewing materials through the laptop's Online Store (only available in store when playing as Fashion Designer).

Replenish in store

*Screen images are illustrated and may not appear in game exactly as shown.

Remove all packaging attachments before giving the toy to a child. Not suitable for children under 3 years due to small parts that could be swallowed. Conforms to product safety standards ASTM F963. Keep instructions for future reference. Do not discard.

SKYROCKET

Questions or comments? Please email support@skyrockettoys.com

©2020 Skyrocket LLC, Los Angeles CA 90066 USA. All Rights Reserved. Pixel Stars and Skyrocket and their respective logos are trademarks and/or registered trademarks of Skyrocket LLC. All other trademarks, logos and copyrights are the property of their respective owners, and there is no relationship express or implied with Skyrocket LLC.

Skyrocket U.K. Limited. Office BG11, Lancaster Court, 8 Barnes Wallis Road, Fareham, PO15 5TU, United Kingdom TEL: +44 1489 668441

MADE IN CHINA.

18199-US-G1

SETTINGS & GAME RESET

Use the laptop in game to reset your game and start completely over from the beginning. Select the Settings option and choose Reset. All game settings will be lost and reset. Volume can also be adjusted within Settings.